


## Instruction manual for Portable Series Classic Tripod Screen

---

**GRANDVIEW®**  
GRANDVIEW REPRODUCING GENUINE COLORS

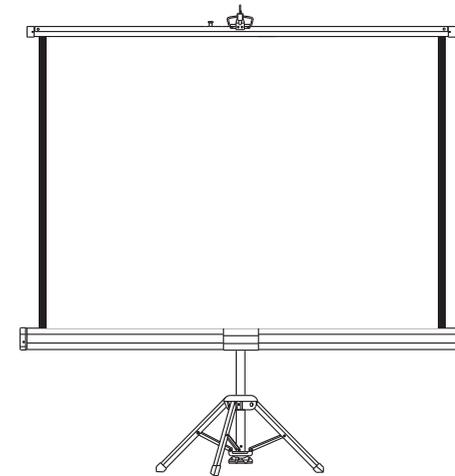

Model: PT-Lxx

**Grandview Crystal Screen Canada Ltd.**

#11- 3751 North Fraser Way,  
Marine Way Business Centre,  
Burnaby, BC, Canada V5J 5G4  
Tel: 1-604-412-9777 Fax: 1-604-412-9796  
Website: [www.grandviewscreen.ca](http://www.grandviewscreen.ca)

**Guangzhou Grandview Crystal Screen Co., Ltd.**



P.O. 511400 Federal Ind. Zone No. 363, Yushan West Road,  
Shiqiao, Panyu District, Guangzhou, Guangdong, China  
Tel: +8620-8489-9499 Fax: +8620-8480-3343  
Website: [www.grandviewscreen.com](http://www.grandviewscreen.com)



Thank you for purchasing a Grandview projection screen.

Before use, please read instructions carefully. After installation, store instructions for future reference.

## Description

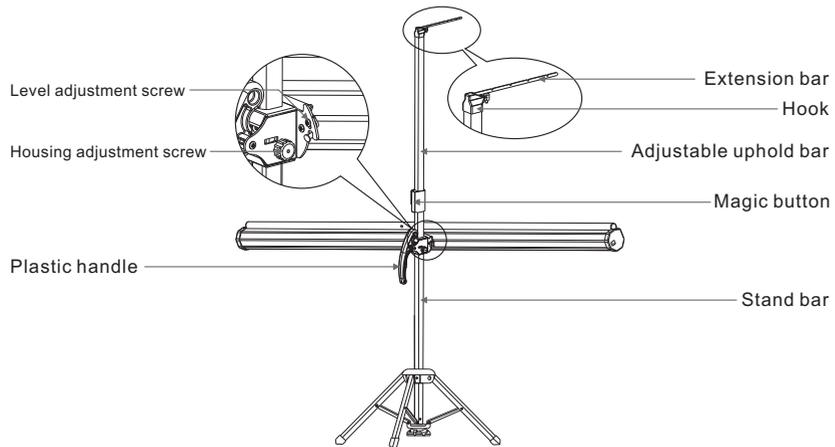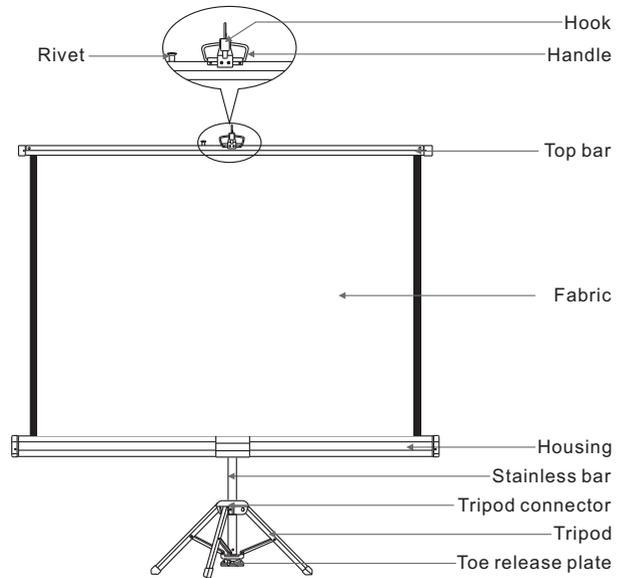

## Warnings

1. Please make sure the Tripod stand is fully extending during using, this can assure stability and safety.
2. You can lower down the screen height according to adjusting the height of Adjusting uphold bar. But please hold the Adjusting uphold bar first then press the Magic button (refer to step 3 of Screen retraction for detail), while not it would lead to damage to the screen.
3. There is a nail at the middle of screen Top bar, please make sure it to be locked onto the slot nearby the Plastic handle. Otherwise it would cause damage during carrying.
4. During retracting, please make sure the Plastic hook lock into a hole on the housing.
5. After folding the screen, make sure that the security lock is turned to Locked position. otherwise, accident or damage of the screen would happen.



Ignoring the safety warnings may lead to injuries and/or damaging the product.



Roll up the screen after every use. Leaving it hanging for a long period of time may cause the fabric to loosen.



Refrain from hanging anything on the screen as it may cause the screen to fall.



Please contact your local dealer for repairs or maintenance. Please contact our company if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fall.

Do not take apart and replace with unknown parts. If there are any problems, please contact your local dealer. Product specifications are subject to change.

## Screen retraction

1. Turn the Housing position lock to "LOCK". (Figure 16)

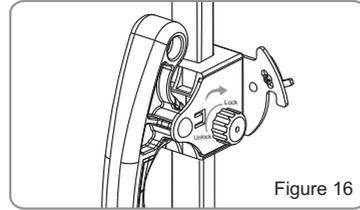


Figure 16

2. After release the Plastic handle to Unlocked condition, please hold the handle to raise the housing until you hear a sound "DA", which means housing is locked, then please also lockup the Plastic handle to Locked condition. (Figure 17-19)

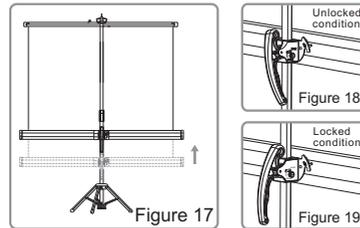


Figure 17

Figure 18

Figure 19

3. Hold the Adjustable uphold bar with your right hand, then press the Magic button with your left hand to lower down the Adjusting uphold bar to down most point. (Figure 20)

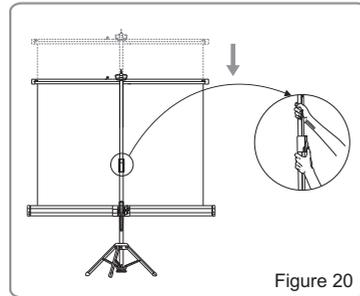


Figure 20

4. Take off the Stainless bar ring from the Plastic hook and retract the screen slowly into the housing. After the housing is rotated to parallel with Aluminum bar, then adjust the Adjustable uphold bar to make the Plastic hook on its top to lock onto a hole on the housing. At this time you can fully retract the Metal tripod stand. (Remarks: Please assure the Top bar is locked onto the Aluminum stand. Figure 21)

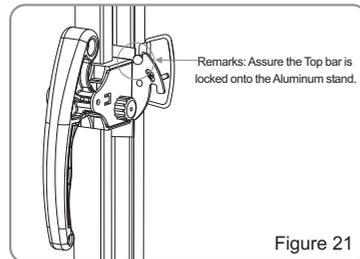


Figure 21

## Screen displaying

1. Grasp the screen handle with one hand and step the toe release plate to fully stretch the tripod on the ground. (Figure 1-3)

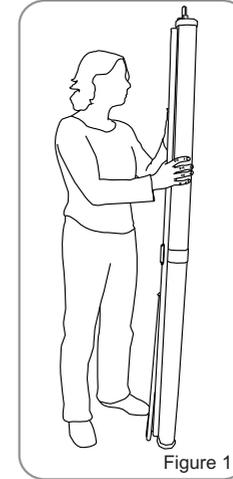


Figure 1

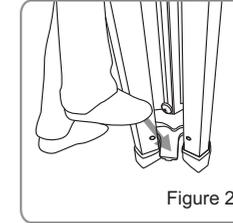


Figure 2

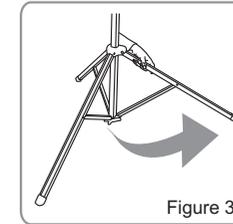


Figure 3

2. Press the Magic button, and raise the adjustable uphold bar to release housing from the plastic hook. (Figure 4)
3. Rotate the housing counterclockwise to horizontal level. (Figure 5)
4. Press the Magic button to low down adjustable uphold bar to the lowest point. (Figure 6)

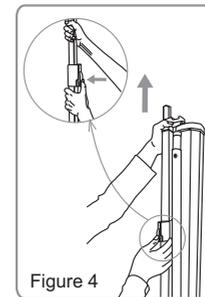


Figure 4

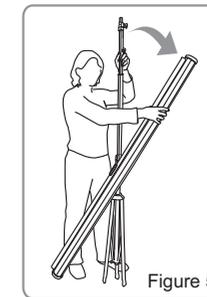


Figure 5





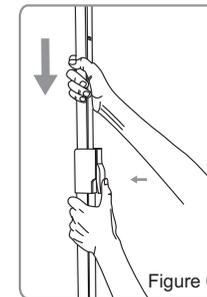


Figure 6

5. Open the screen:




Method 1: Pull up and hang the bar ring onto the Plastic hook. (Figure 7-8)

Method 2: For different gradient viewing angle, we can use Keystone system. Pull out the extension bar hidden in the uphold bar and turn it to a horizontal level. Hand the metal hook ring over the extension bar which has four optional slots for fixing the screen. (Figure 9-10)

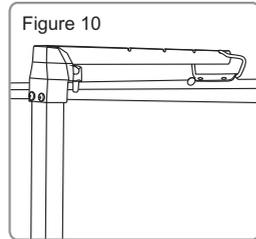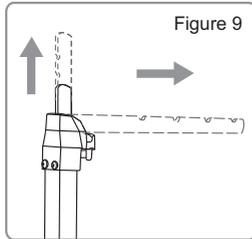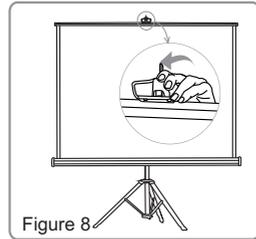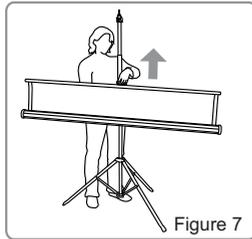


6. To meet different viewing height (from floor to housing), you can adjust the position of housing via the Plastic handle. (Figure 11)

Method: Turn the Housing position lock to status of "UNLOCK", and hold the Plastic handle as well as lower down the housing slowly to your appreciated position after release the Plastic handle to Unlocked condition then lockup the Plastic handle to Locked condition. The housing can be even lower after you lower down the Adjusting uphold bar to another lockhole below and then adjust and lockup the housing to your appreciated position. (Figure 12-13)

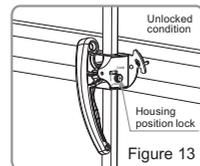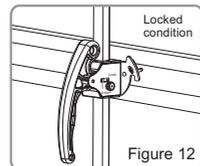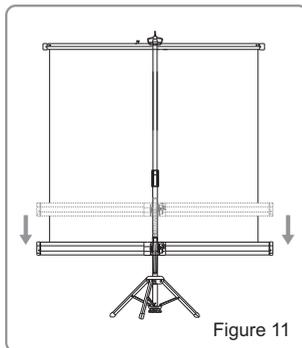

7. To hold the Aluminum stand with one hand, and hold the Adjusting uphold bar with another hand as well as raise it to adjust the height of the screen. (Figure 14) Remarks: You don't need to press the Magic button while raise the Adjustable uphold bar. The screen viewing area can display in 1:1, 4:3 or 16:9 format according to different height of Adjustable uphold bar and height of housing.

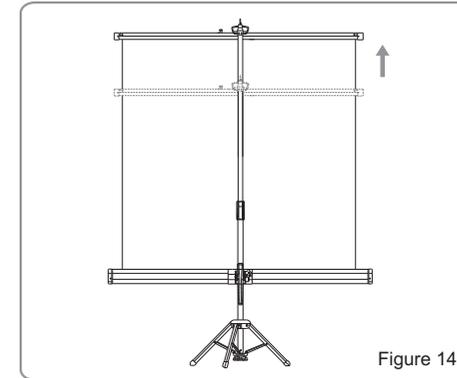

### Special Level Adjustment Device

If the housing is found to a little inclined when fully displayed, you can adjust it horizontally according to the Level adjustment device. (Figure 15)

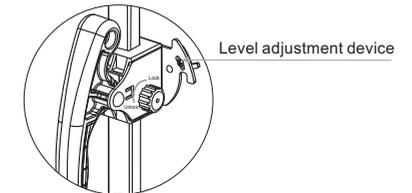
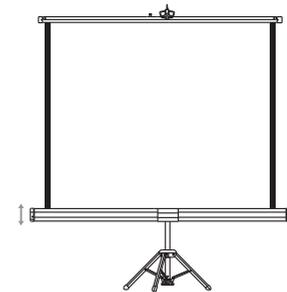


Figure 15