

#### Grandview Crystal Screen Canada Ltd.

#11- 3751 North Fraser Way, Marine Way Business Centre, Burnaby, BC, Canada V5J 5G4 Tel: 1-604-412-9777 Fax: 1-604-412-9796 Website: www.grandviewscreen.ca

#### Guangzhou Grandview Crystal Screen Co., Ltd.


P.O. 511400 Federal Ind. Zone No. 363, Yushan West Road, Shiqiao, Panyu District, Guangzhou, Guangdong, China Tel: +8620-8489-9499 Fax: +8620-8480-3343 Website: www.grandviewscreen.com www.grandviewscreen.com.cn



GRANDVI≣W®



# Instruction Manual for Cyber Portable Series Pull-Up Screen

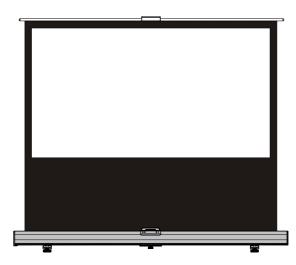


Model: CB-Uxx


Thank you for purchasing a Grandview projection screen.

Before use, please read instructions carefully. After installation, store instructions for future reference.

The model is a portable pull-up screen, the design is compact and lightweight. It is suited for various venues such as business, presentation, boardromm, home theathes and other ententainment sites.

# Description

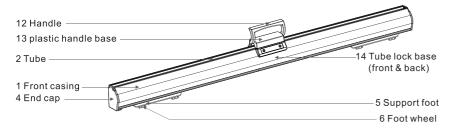

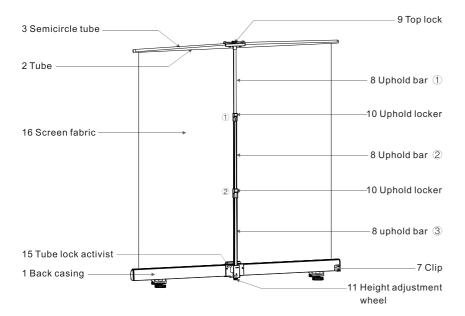

Casing Assembly	<b>Upload Bar Assembly</b>	Hook & Lock Assembly	Screen
1. Casing (front & back)	8. Uphold bar ①②③	12. Handle	16. Screen fabric
2.Tube	9. Top lock	13. Plastic handle base	
3 .Semicircle tube	10. Uphold locker	14. Tube lock base (front & back)	
4 .End cap	11. Height adjustment wheel		
5 .Support foot		15. Tube lock activist	
6 .Foot wheel			
7 .Clip			

GRANDVI≣W®


## Warnings

- 1. Control the uphold bar simultaneously pushing the uphold locker while pull up or down the screen. Otherwise the screen will be damaged by fast down out of control.
- 2.Be sure the handle base were locked into the fastener at the top of uphold bar stable, and the handle were fastened on the holder at the top of uphold bar.

## Malfunction solutions

#### 1. Screen Fabric is not smooth when screen is unfolded.

- a. Hold and push slightly fixed tube in the middle of position of tube untill loose from the semicirde tube. (Figure 14)
- b. Adjust the foot wheel of support and height adjustment wheel. (Figure 15-16)








Figure 14

Figure 15

Figure 16


# 2. The fixed holding bar can not be raised when it is in use.

a. Check whether the uphold bar is vertical to the outer case or refer to Installation Step3.


## Installation

#### **Open Screen**


1. Put the screen on the ground, in a proper position, facing the projector. Turn the support foot (5) out untill they are perpendicular to the screen casing (1). (Figure 1)



2.Lift the uphold bar (8 ③) 90 degrees vertically until it clicks. Raise the uphold bar (8 ②) while simultaneously pushing the uphold locker(10) .(Figure 2-4)




3.Pull up the screen by grasping the handle(12) and lock the handle base on the fastener at the top of uphold bar(8). (Figure 5-7)

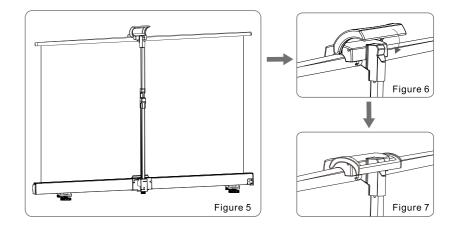

GRANDVIEW'

4. Pull up and lock the uphold bar(8) to the desired height. The screen is fully released. The screen height could be adjusted to 6 different levels by adjusting locking position of uphold bar. (Figure 8)

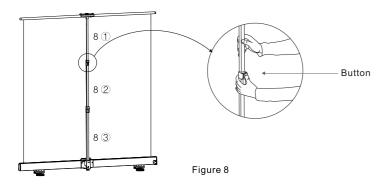


5. To get the flat screen by adjusting foot wheel, when it were declined.

## Retract screen


#### please retract the screen for store.

1.Push the uphold locker using one hand simultaneously pull down the uphold bar( 8①) with another hand . Repeat the same action to low down the uphold bar (8②). (Figure 9)

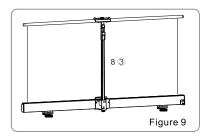


Remove the handle fromthe fastener at the top of uphold bar .Grasp the handle, lower the screen to allow it retract into the case. Be sure the handle base connected with tube lock base.


(Figure 10)

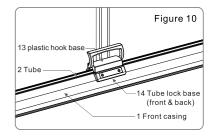

3.Fold down and lock uphold bar (8 ③) to its clip(7). Return the support foot to original position.(Figure 11)

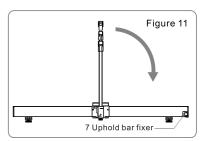

4.Be sure the screen is completely stowed and locked before carrying the product by handle, even if the screen could be locked automatically while the uphold bar were locked in the clip. (Figure 12)



GRANDVI≣W®